

FLEXY

Antifouling for inflatables

FLEXY is a specially formulated antifouling paint that maintain flexibility and is therefore suitable for inflatables (neoprene and hypalon) as well as fibreglass. It can be applied directly on both, without any primer.

APPLICATION

- 1) Remove completely wax and other greasy stains from the surface with SOLVENTE 102 ANTISILICONE or another good degreasing solvent.
- 2) Sand the surface of the fabric of the inflatable (neoprene or hypalon) with light sandpaper (180 – 220) being careful not to damage it.
- 3) Sand the fiberglass surface of the hull with coarser sandpaper (100 – 120)
- 4) Apply 2-3 coats of FLEXY waiting at least 6 hours between coats directly on the sanded fabric and/or fiberglass.
- 5) Wait at least 16 hours after the last coat, before launching.

RECOMMENDATIONS

- For application by brush or roller, do not dilute the product. For spraying, dilute only with our THINNER N. 4 (do not use any other solvent, do not use SOLVENT 102 ANTISILICONE).
- Do not apply FLEXY on any other antifouling. On the top of exhausted FLEXY from previous season, another two coats of FLEXY directly. We suggest removing all the antifouling paint every 2-3 seasons to avoid accumulation and thus too high thickness that could reduce the performance of the paint.
- Do not use on aluminium or light alloy.

TECHNICAL DATA

<i>Colours</i>	White, black, grey, red
<i>Specific gravity</i>	1.70 - 1.80
<i>Application</i>	brush, roller, spray gun
<i>Drying time:</i>	
<i>dust dry</i>	30 mins at 20°C
<i>touch dry</i>	1 hours at 20°C
<i>for recoating</i>	6 hours at 20°C
<i>for launching</i>	min. 16 hours, max. 4 months
<i>Thinner</i>	n. 4